






All-in-One Collaborative Touch Panel


# Quick Start Guide







**NovoTouch**  
BK3 Series

## Package Contents

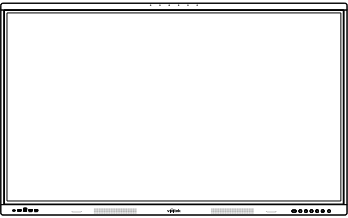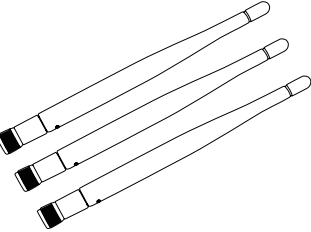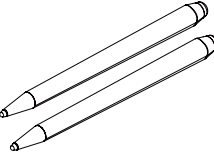
|                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |
| Display                                                                             | Wi-Fi Antenna x 3                                                                   | Stylus x 2                                                                          |
 
|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| Remote Control                                                                      | Batteries                                                                           |
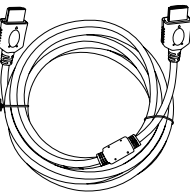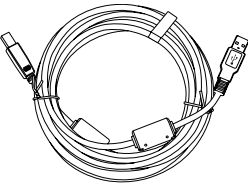
|                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |
| HDMI Cable                                                                          | Power Cable                                                                         | USB Cable                                                                           |

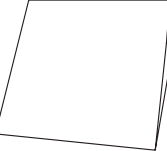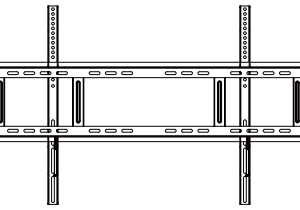
|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |
| Quick Start Guide                                                                   | Wall Mount (Including Screws)                                                       |

## Display Overview (Front)

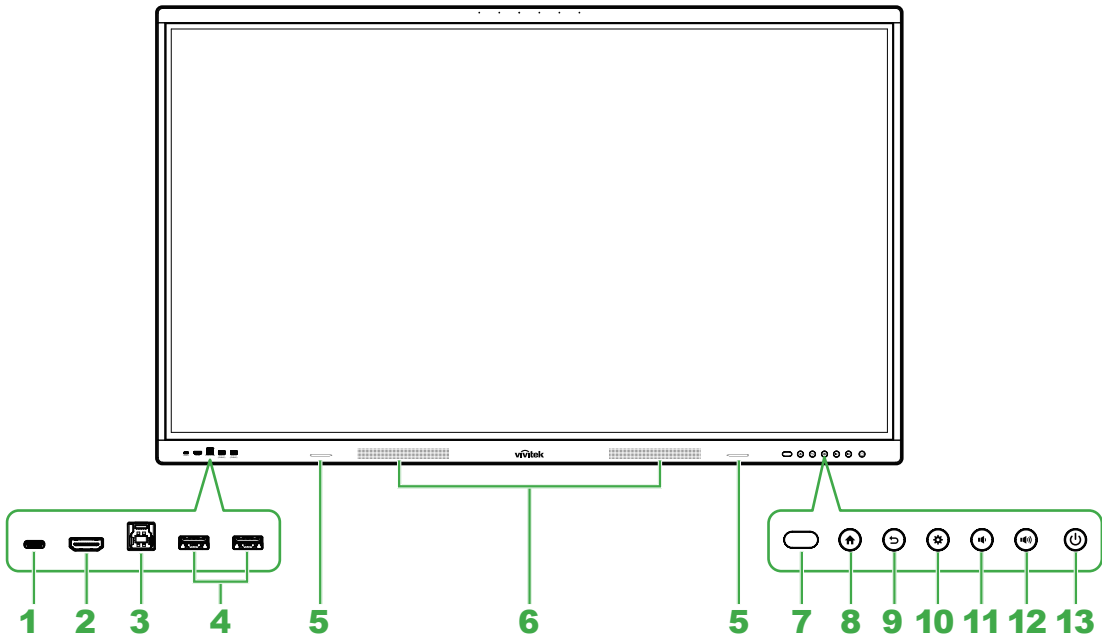

- |   |                         |    |                                |    |                    |
|---|-------------------------|----|--------------------------------|----|--------------------|
| 1 | USB-C Port              | 6  | Speakers                       | 11 | Volume Down Button |
| 2 | HDMI Port               | 7  | IR Sensor (for Remote Control) | 12 | Volume Up Button   |
| 3 | Touch (USB-B) Port      | 8  | Home Button                    | 13 | Power Button       |
| 4 | USB-A 3.0 Ports x 2     | 9  | Back Button                    |    |                    |
| 5 | Magnetic Stylus Holders | 10 | Settings Button                |    |                    |

## Display Overview (Rear)

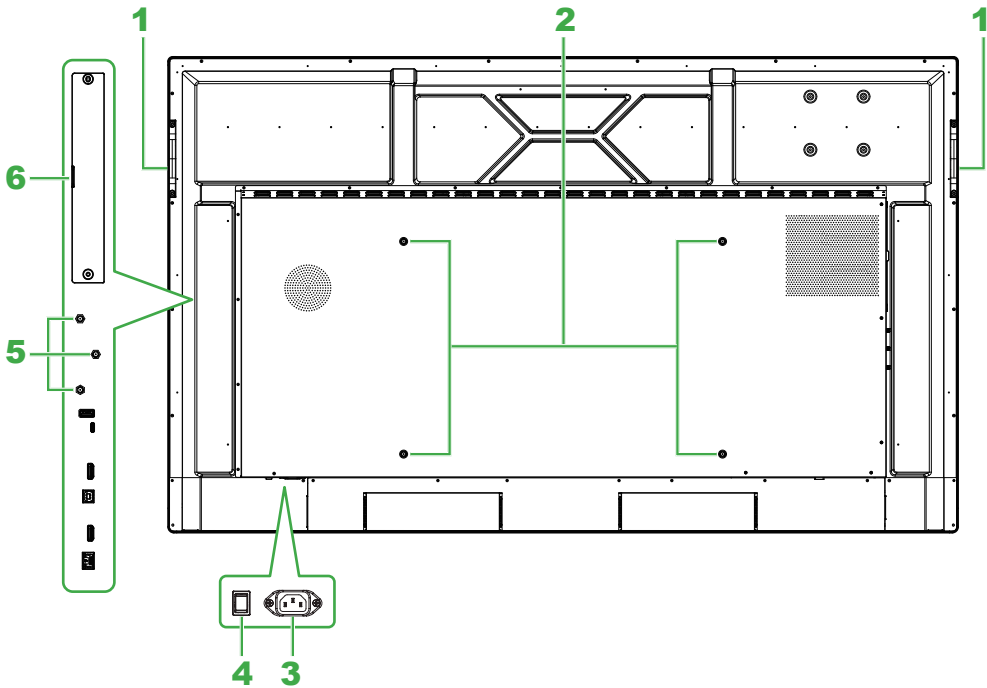

- |   |                        |   |                          |
|---|------------------------|---|--------------------------|
| 1 | Handles                | 4 | Power Switch             |
| 2 | Wall Mount Screw Holes | 5 | Wi-Fi Antenna Connectors |
| 3 | Power Socket           | 6 | 80-Pin OPS Slot          |



**Vivitek America**  
Vivitek Service Center  
14910 Summit Drive  
EASTVALE, CA. 92880  
U.S.A  
Tel: 855-885-2378 (Toll-Free)  
Email : T.services1@vivitekc corp.com

**Vivitek Asia**  
7F, No. 186, Ruey Kuang Road, Neihu, Taipei 11491,  
Taiwan R.O.C.  
T: +886-2-8797-2088  
F: +886-2-6600-2358

**Vivitek Europe**  
Zandsteen 15, 2132 MZ Hoofddorp  
The Netherlands  
T: +31-20-800-3960  
F: +31-20-655-0999



Europe Website  
(Manual/Support)




Global Website  
(Manual/Support)

For more information, please visit  
the NovoTouch support website.


brand of 

Ports and Connectors

Left


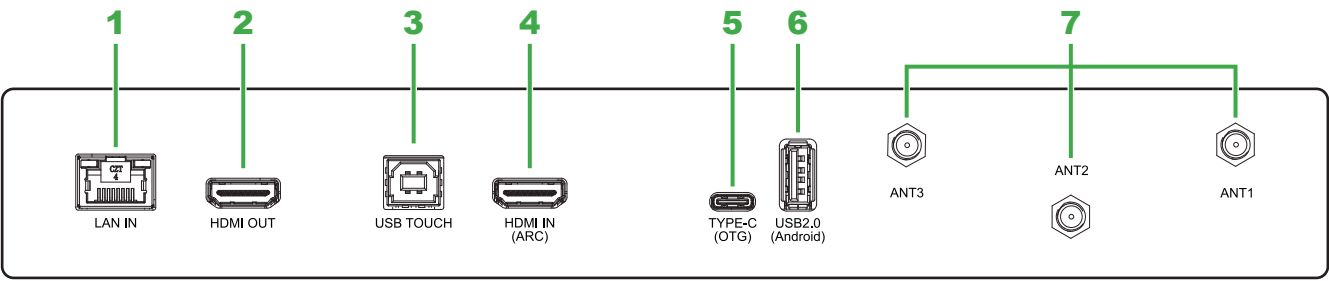


Bottom

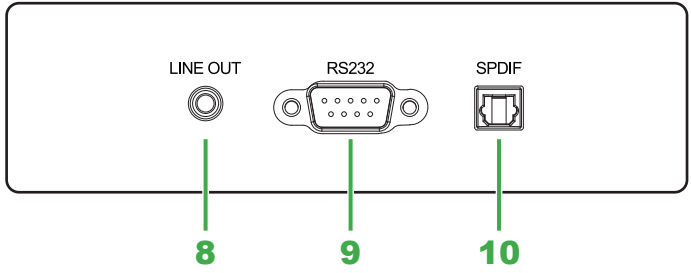


- |   |                         |   |                              |    |               |
|---|-------------------------|---|------------------------------|----|---------------|
| 1 | LAN In Port             | 5 | USB-C Port (with OTG)        | 8  | Line Out Jack |
| 2 | HDMI Out Port           | 6 | USB 2.0 Port (with Android)  | 9  | RS232 In Port |
| 3 | Touch (USB-B) Port      | 7 | Wi-Fi Antenna Connectors x 3 | 10 | SPDIF Port    |
| 4 | HDMI In Port (with ARC) |   |                              |    |               |

Connections

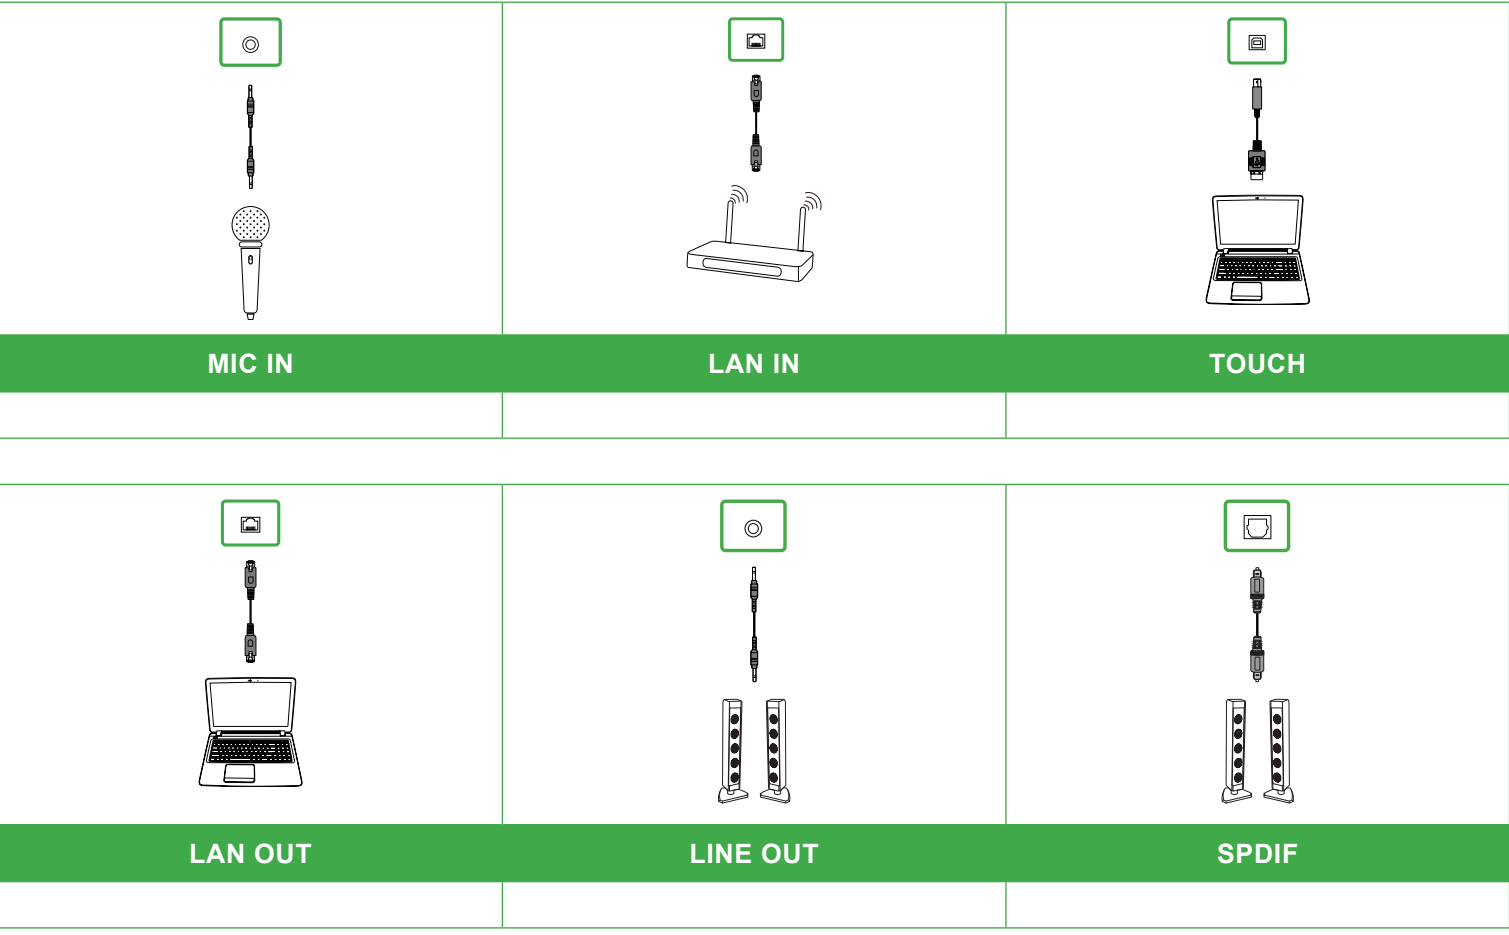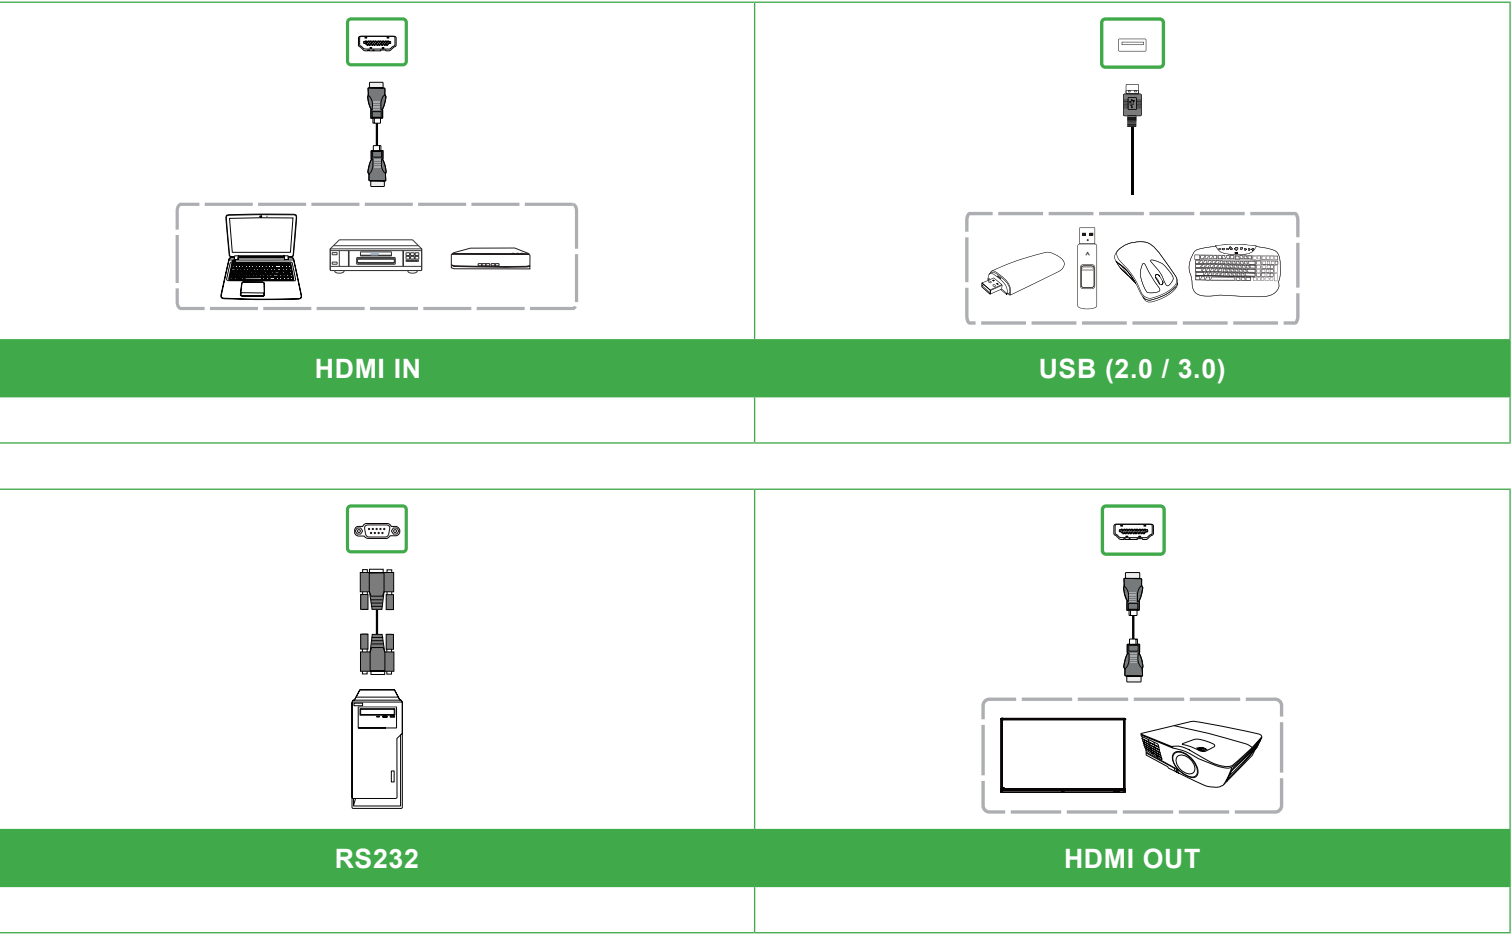


Remote Control

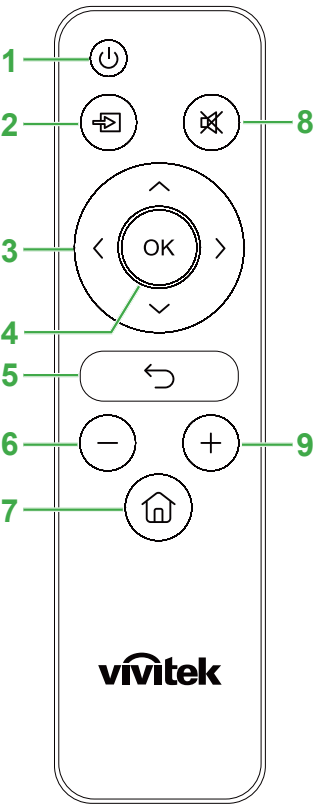


- |   |                    |
|---|--------------------|
| 1 | Power              |
| 2 | Input Source       |
| 3 | Navigation Buttons |
| 4 | OK                 |
| 5 | Back               |
| 6 | Volume Down        |
| 7 | Home               |
| 8 | Mute               |
| 9 | Volume Up          |

Getting Started

Insert the Wi-Fi antennas onto the connectors, rotate them clockwise, and then turn the antennas inwards.

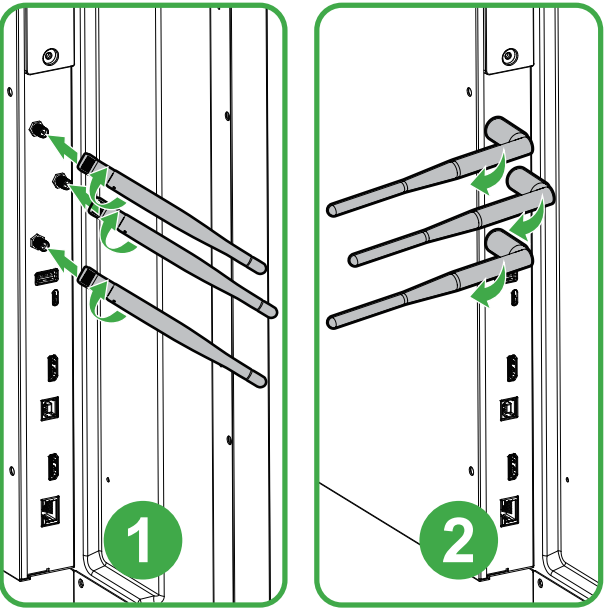

Plug the power cable into the display and a power source, turn the power switch on, and then press the power button.

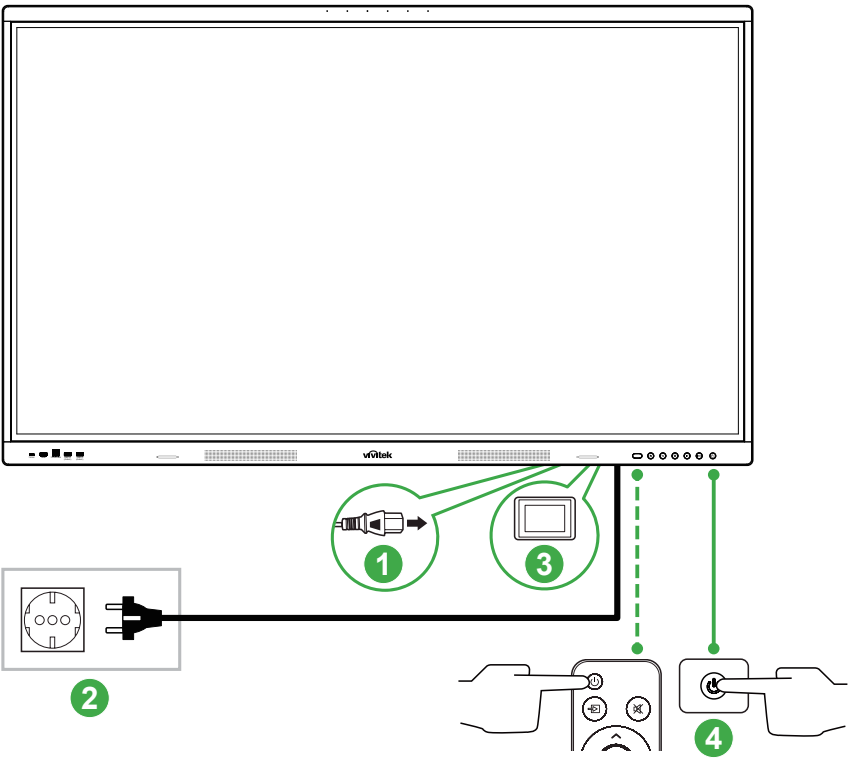

Home Screen

